

Welcome to the eLite Flow V2, the only light that changes modes for you while you just get to keep on flowin'. The Flow V2 features twice as many flashing patterns as V1, 3 all new ways to flow through your modes and the same easy-to-use 1 button programming you know and love. This light is easy for beginners, customizable for advanced users and perfect for all kinds of flow.






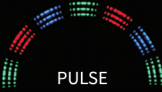
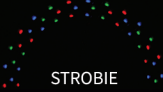

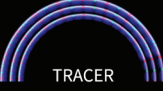




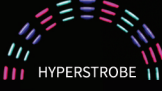
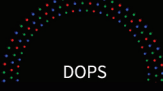

Features to Customize

- 16 Flow-based Flashing Patterns
- Up to 3 colors per mode
- Matrix-Style Mode Ordering
- 3 Mode Shuffle Sequences

Normal Operation:

1. **Unlock & Turn On:** Click and hold your lights for 3 seconds until they flash **RED**. Then release.
2. **Flow Timer:** Every 8 seconds, your modes will automatically change through the patterns listed in the chart below.
Note: Clicking the button while the light is on will disable the Flow Timer.
3. **Turn Off:** Click and hold your lights for half a second to turn them off at any time.

Default Modes:

	FLASHING PATTERNS				DEFAULT COLORS
Mode 1	 CHROMA FADE	 CHROMA MORPH	 STROBE FADE	 STROBE MORPH	Blue, Pink, Yellow
Mode 2	 VEX	 PULSE	 STROBIE	 FLICKER	Red, Sky Blue, Mint
Mode 3	 TRACER	 CHROMA	 CENTERPOINT	 DASH DOT	Purple, Orange, Green
Mode 4	 STROBE	 HYPERSTROBE	 DOPS	 SHADOW	Hot Pink, True White, Purple

Programming Custom Color Sets

The Flow V2 lets you create a custom Color Set combining up to 3 colors with just 1 button. This color set will be applied across all flashing patterns and will override all default colors.

1. With the light OFF, click and hold the button. First it will flash **RED**, then it will flash Orange. Release on **ORANGE**.
2. You will now see **WHITE**, the first color on the color palette below. Continue clicking to see all 20 colors.
3. To choose the first color of your color set, stop on the color you want and hold the button for half a second.
4. Repeat step 3 to program your 2nd and 3rd color. To program less than 3 colors, go to "Blank" (appears low flashing white), click and hold until it flashes **RED**, then release.



Changing Your Mode Shuffle Sequence

The Flow V2 uses the Flow Timer to change patterns every 8 seconds. You can select from 3 different Mode Shuffles on-the-fly to keep your light show fresh.

1. Click to turn on the light and **do not click again**. Clicking again will disable the Flow Timer. If you did this, turn the light off and back on again.
2. Click and hold until the light flashes **Yellow**. Click through the 3 Yellow options: **Solid**, **Blinky** and **Super Blinky**. These represent Vertical, Horizontal and Selected shuffles respectively. Click and Hold to select any of them.
 - **Solid** - “**Vertical**” This will maintain the default Mode Shuffle, flowing vertically down the columns on the front of this sheet, starting with the left-most column and continuing right. This will use all 16 Flashing Patterns on loop.
 - **Blinky** - “**Horizontal**” This will flow through the patterns left to right, starting with the top row and continuing down. This will also use all 16 Flashing Patterns on loop.
 - **Super Blinky** - “**Selected**” This will flow through the 4 Flashing Patterns that you have currently selected. See the below instructions “Selecting Flashing Patterns” to choose which patterns you’d like to display in this Mode Shuffle.

Selecting Flashing Patterns (Flow Timer: Off)

After you turn on your Flow V2 and click once, your Flow Timer will deactivate and the modes will no longer change over time. Click to manually change between Modes 1-4.

Each mode is default set to the left-most pattern indicated in the Default Modes chart (Mode 1: Chroma Fade, Mode 2: Vex Flow, etc.).

Flashing Patterns				
Mode 1	Chroma Fade	Chroma Morph	Strobe Fade	Strobe Morph
Mode 2	Vex Flow	Pulse	Strobie	Flicker
Mode 3	Tracer	Chroma	Centerpoint	Dash Dot
Mode 4	Strobe	Hyperstrobe	Dops	Shadow

Each mode can be modified to use any Flashing Pattern in its highlighted row. Follow these instructions to do this.

1. Click to turn on the light, **then click again**. If you do not click again you will not be able to access these Flashing Pattern options.
2. Click to the mode where you want to change your Flashing Pattern. For example, click to Mode 2 if you’d like to change from Vex Flow to Pulse, Strobie or Flicker.
3. Click and hold until you see flashing **Blue**. Then release.
4. Click through the 4 Flashing Pattern options in the row. When you find the one you want to use, click and hold for half a second.
5. The Flow V2 will now use this flashing pattern, even if you turn your light on and off.

You can use any combination of the 4 flashing patterns in each Mode. **Example:**

Flashing Patterns				
Mode 1	Chroma Fade	Chroma Morph	Strobe Fade	Strobe Morph
Mode 2	Vex Flow	Pulse	Strobie	Flicker
Mode 3	Tracer	Chroma	Centerpoint	Dash Dot
Mode 4	Strobe	Hyperstrobe	Dops	Shadow

eLock Battery Protection

Use this function to lock your lights so they don’t turn on in your pockets or bags.

1. With the light OFF, hold the button down until it flashes **RED**. Then release.
2. To lock your light, hold to select **HIGH RED (H)**, then release. To exit, hold **LOW RED (L)**, then release.
4. If you selected High Red, your lights will turn off and lock. They cannot be turned back on by clicking.
5. **To unlock**, click and hold for 3 seconds. Your lights will return to normal function retaining all custom programming.

Master Reset

1. With the light OFF, hold the button until it flashes **WHITE**, then let go.
2. You may now select **HIGH WHITE (H)** or **LOW WHITE (L)**.
3. To Master Reset, hold to select **HIGH WHITE (H)**. Your Element will now be reset to factory default settings.
4. To exit and keep your lights with current programming, hold to select **LOW WHITE (L)**.