



HOME *of* POI

Soft LED Glow Ball Instructions

Before the unit can work, you must remove the batteries and take out the white circular discs which separate them. Replace the batteries and screw the cap into place to turn the unit on. To turn it off, unscrew the cap until the unit stops glowing.



Trouble Shooting Tips

If your glow balls are flickering or not lighting up, try the following.

- Clean the batteries with a soft cloth before use
- Stretch the spring under the cap to maximize the connection
- Sometimes dirt can get onto the bottom connection plate which may need to be cleaned off creating a new contact surface for the batteries.
- Swap the screw cap from the Glow Ball to the other to determine if the cap is the issue.

If you have any further questions, please email us at:

support@homeofpoi.com