

Thank you for your purchase of your new Pro Series USB rechargeable LED Ball

Getting Started:

Your USB rechargeable LED ball may have some charge on arrival or none, due to customs regulations the ball must have 10% or less charge when shipping so you will need to give this a charge before use.

Charging will take around 2-3 hours for a full charge depending on the current charge of the battery. When charging, the ball will light up indicating how much battery life is remaining.

Low charge will show as red and full charge will show as green.

One charge will last around 2-3 hours of play depending on the modes used.


Operating Instructions:


Always make sure your ball has a full charge before first use. To turn on, press and hold the button beside the USB port for 4-5 full seconds and release. The ball will always turn back on to the last mode used. Please read further for mode options and how to access them. To turn off, press and hold the button for 4-5 full seconds and release, a faint flash will show right before turning off.


Charging:

The charge port is a standard size Micro-USB port which will only go in one way. Push the charge cable in gently until it cannot go further, then plug the other end into your USB port for charging. Once fully charged pull gently to remove the cord from the socket.

Mode Option Types:

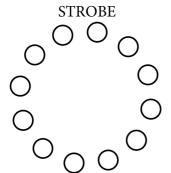

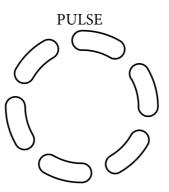

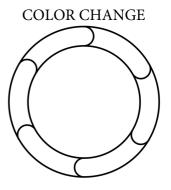




1x Single Press will change to the next color. 2x Presses (quick press) will change to the next mode.

Mode A: This mode will start on strobe then move to pulse then to color change and then back in the colors selected below.


1.White/Red 2.White/Green 3.White/Blue 4.White/Yellow 5.White Indigo 6.Red/Yellow 7.Green/Indigo 8.Pink/Green

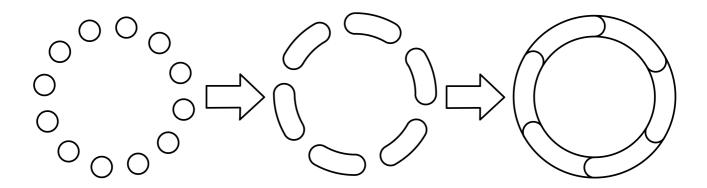


Mode B: This mode will change through the colors shown in there groups in the pattern indicated to the right of the colors.

1.Red > Green > Blue > Yellow > Indigo > Purple > Orange > White

2.Red > Green > Blue > Yellow > Indigo > Purple > Orange > White

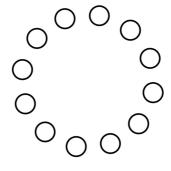

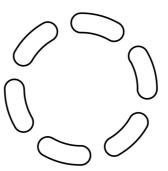



Mode C: Will show the pattern to the right in the color selected on the left.



2.Red/Indigo

3.Purple/Green


4.White/Blue

5.Yellow/Green

6.Red/Green

7.Green/Orange



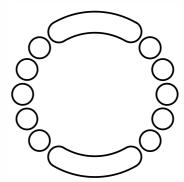

8.Red/Blue

9.White/Green

10.White/Blue


11.White/Yellow

12.White/Indigo

13.White/Purple

14.White/Orange



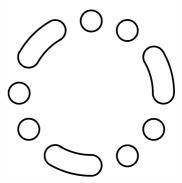

15.Red/Green/Blue/

Indigo/Purple


16.Green/Blue

17.Indigo/Red

18.Yelow/Green


19.Yellow/Pink

20.Pink/Indigo

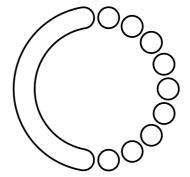



Mode D: Solid Lines of color getting longer and shorter in the color chosen below.

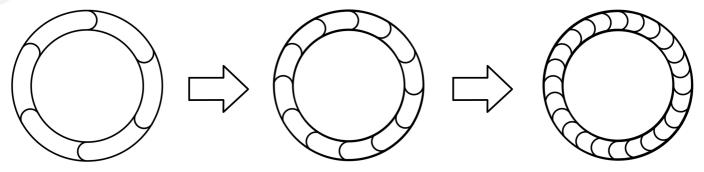

1.Red/White 2.Green/White 3.Blue/White 4.Yellow/White 5.Indigo/White 6.Red/Yellow 7.Green/Indigo 8.Pink/Green

Mode E: Goes through all the modes listed below.

- 1.ColorChange (all colors)
- 2.RainbowFade (all colors)
- 3. RainbowStrobe (all colors)
- 4.Red (solid)
- 5.Green (solid)
- 6.Blue (solid)
- 7.Yellow (solid)
- 8.Indigo (solid)
- 9.Purple (solid)
- 10.Orange (solid)
- 11. White (solid)

If you have any questions please feel free to visit our website:

www.homeofpoi.com

or contact our support team: support@homeofpoi.com

Happy Spinning!!